11152

Color-Changing

LCD Night Light

Time, Temperature, Date & Day

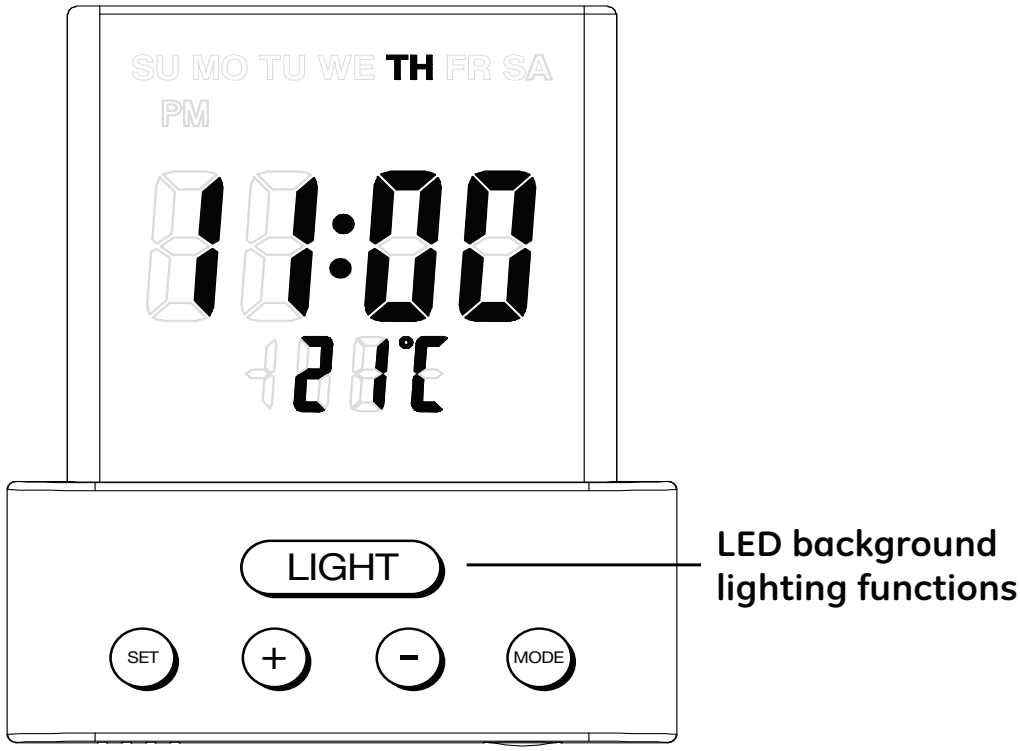

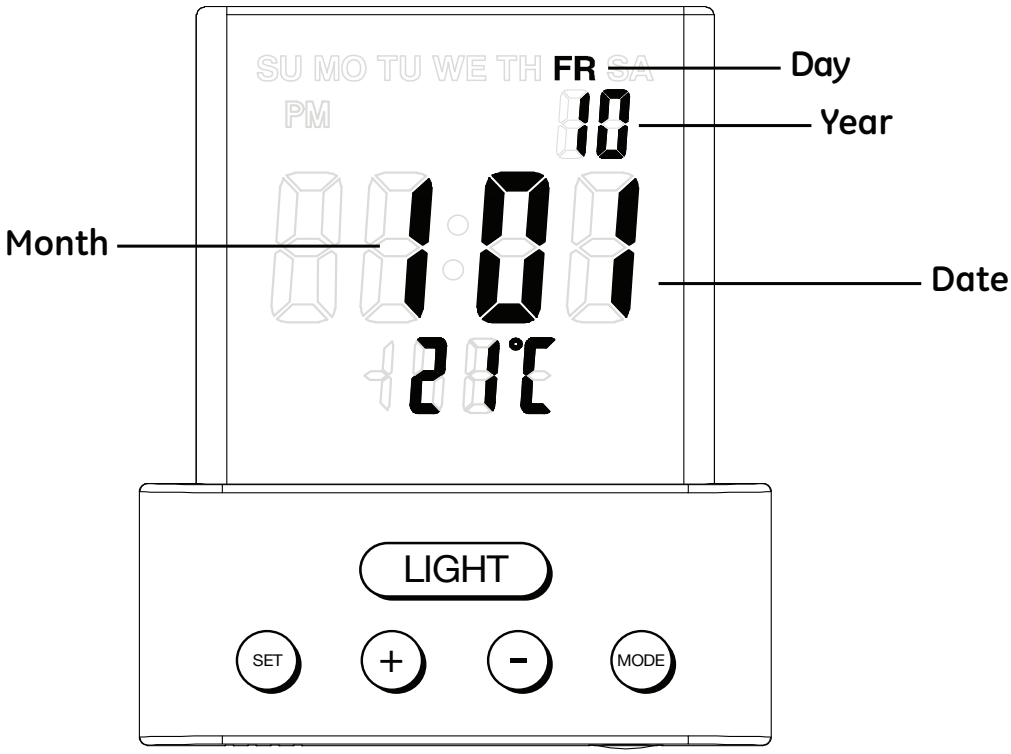

IMPORTANT: Remove cling sticker over the clock face before use.

Please note before starting:

Open the battery compartment on the back of the LCD clock as shown.

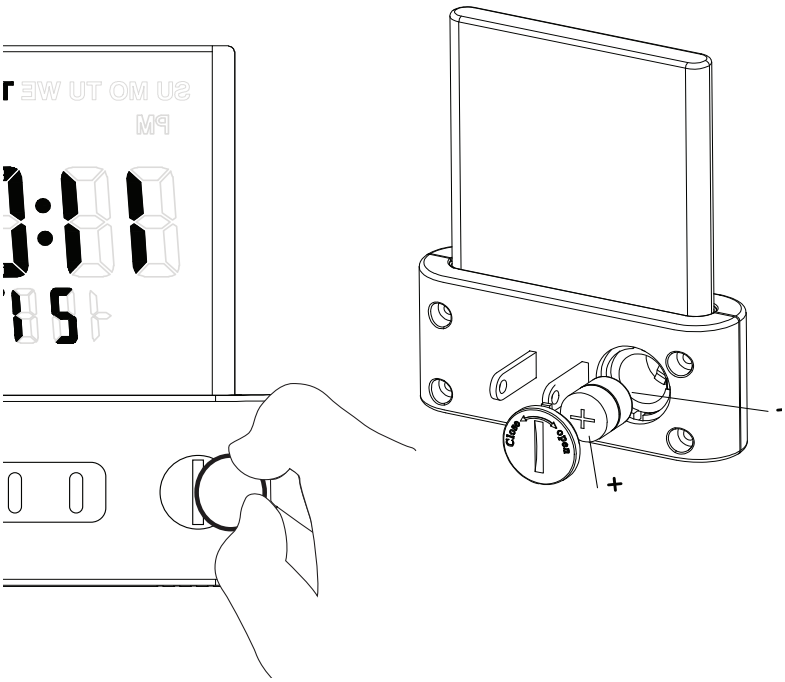

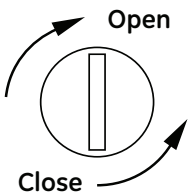

Use a coin to open or close the battery compartment

Insert the two included LR44 batteries and wait for three seconds, the LCD clock screen will come on.

Note: If 5 seconds elapse while in the set mode & no button is pushed, it will revert back to the run mode.

Refresh/Change batteries if LCD display becomes faint or blank.

How to set: Hour / Minute / Month / Date / Year/ Temp.

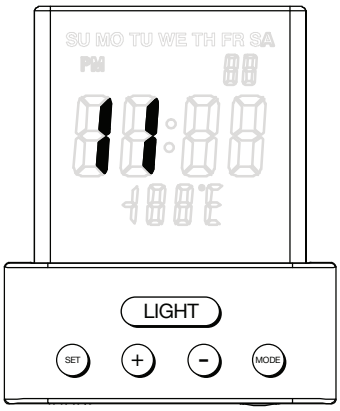

Hour

Press and hold SET until hour flashes.
Press + or – to adjust the hour.
Press SET to go to the next setting.

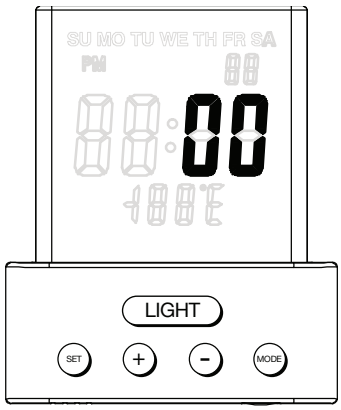

Minute

01 will start flashing.
Press + or – to adjust the minute.
Press SET to go to the next setting.

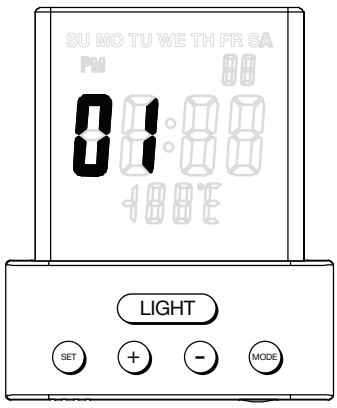

Month

01 will start flashing.
Press + or – to adjust the month.
Press SET to go to the next setting.

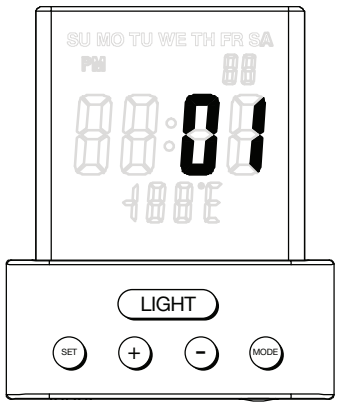

Date

01 will start flashing.
Press + or – to adjust the date
Press SET to go to the next setting

Year

09 will start flashing. Press + or – to adjust the date. Press SET to go to the next setting

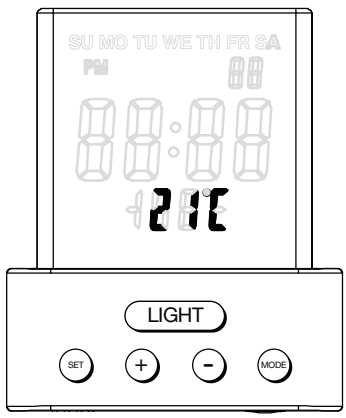

Temperature

21°C will start flashing.
Press + or – to adjust the temp :
+ °C or -°F. Press SET to end
the settings

How to set the color cycling mode:

NOTE: Background lighting only works when the night light / clock is plugged into a live outlet and is in a dark room.

If night light loses power, color selection will revert back to color cycling mode.

To change light from color cycling mode to a set color, simply press and release the center of **LIGHT** button until desired color appears.

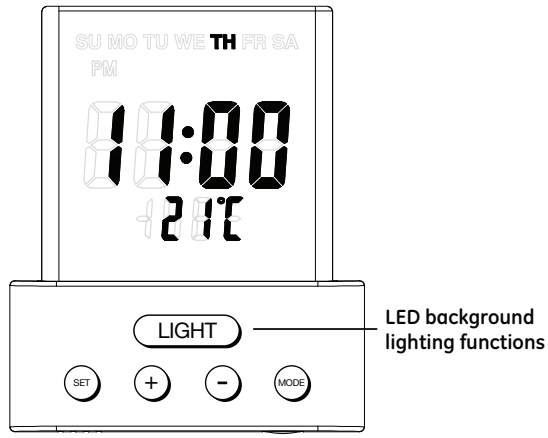

Press and release the center of the LIGHT button to turn light off or return to color cycling mode.

Using the mode to alternate date and time

Pressing the MODE button sets the night light to alternate between the time and date displayed.
Press the MODE button again, and time is continously displayed.

⚠ CAUTION

BATTERIES MAY LEAK HARMFUL LIQUIDS OR IGNITABLE MATERIALS OR EXPLODE CAUSING INJURY AND PRODUCT DAMAGE.

- DO NOT MIX OLD AND NEW OR OTHER BATTERY TYPES.
- REPLACE ALL BATTERIES AT THE SAME TIME.
- REPLACE OR REMOVE FULLY DISCHARGED BATTERIES IMMEDIATELY.
- REMOVE BATTERIES BEFORE STORING THE NIGHT LIGHT FOR EXTENDED PERIODS.

GE is a registered trademark of General Electric Company and is used under license to Jasco Products Company LLC,
10 E Memorial Rd., Oklahoma City, Oklahoma 73114
www.jascoproducts.com
Made in China / Hecho en China

11152-1
01-16-12
Version 3